# CONNECTRUCK

Web Portal User Manual




<u>Go to www.connectruckglobal.com</u> website and click «**Login**» with your username and password.




You can change the language from the login page.

# CONNECTRUCK


Map Screen

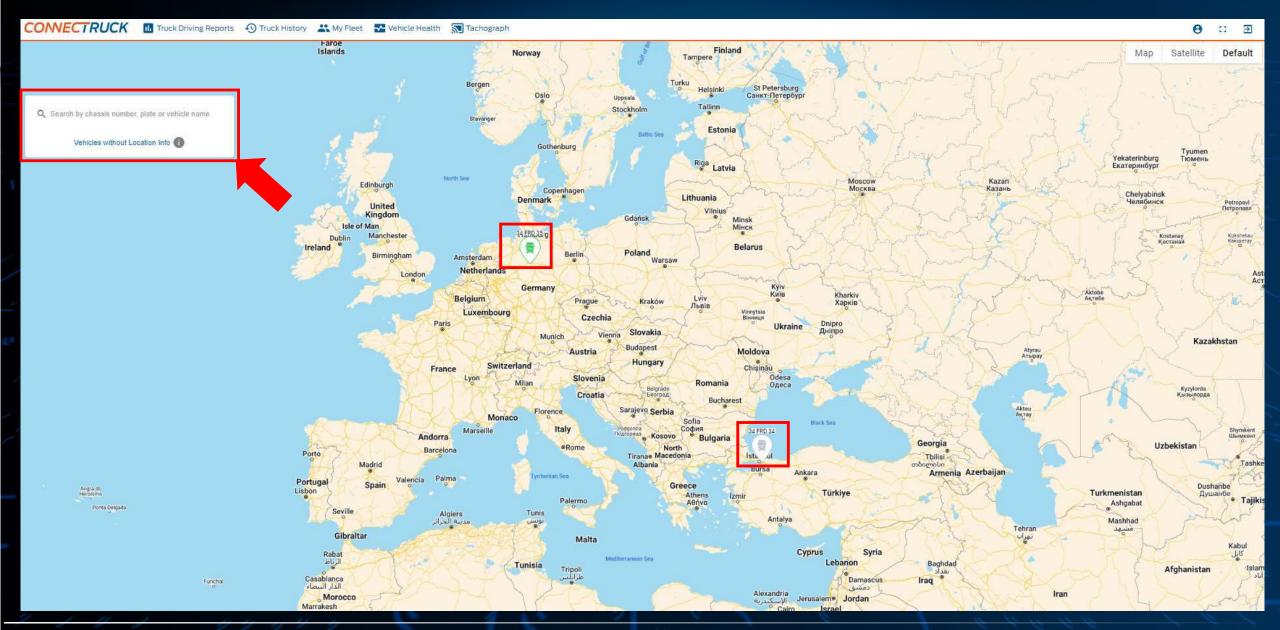


You can see the locations of your vehicles and search them from the search bar on the top left corner.

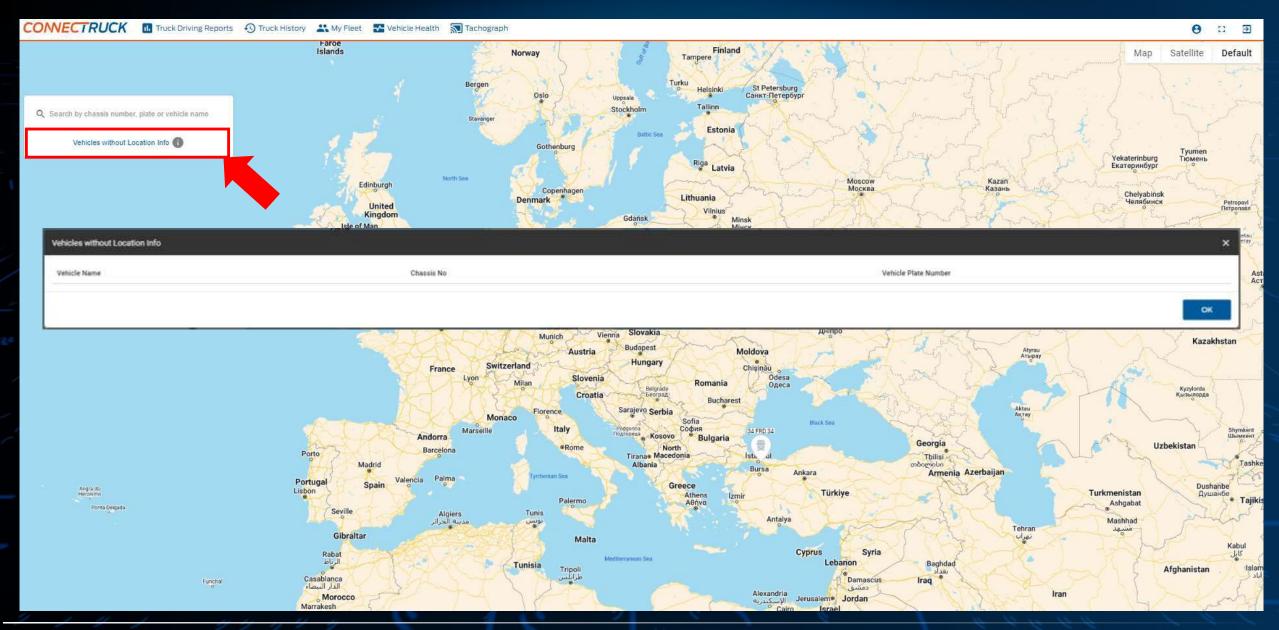

If you have vehicles that have not started data transmission yet, you can see their list in the 'Vehicles without Location Info' menu. If all the vehicles defined in your account are transmitting data, this list will be empty.

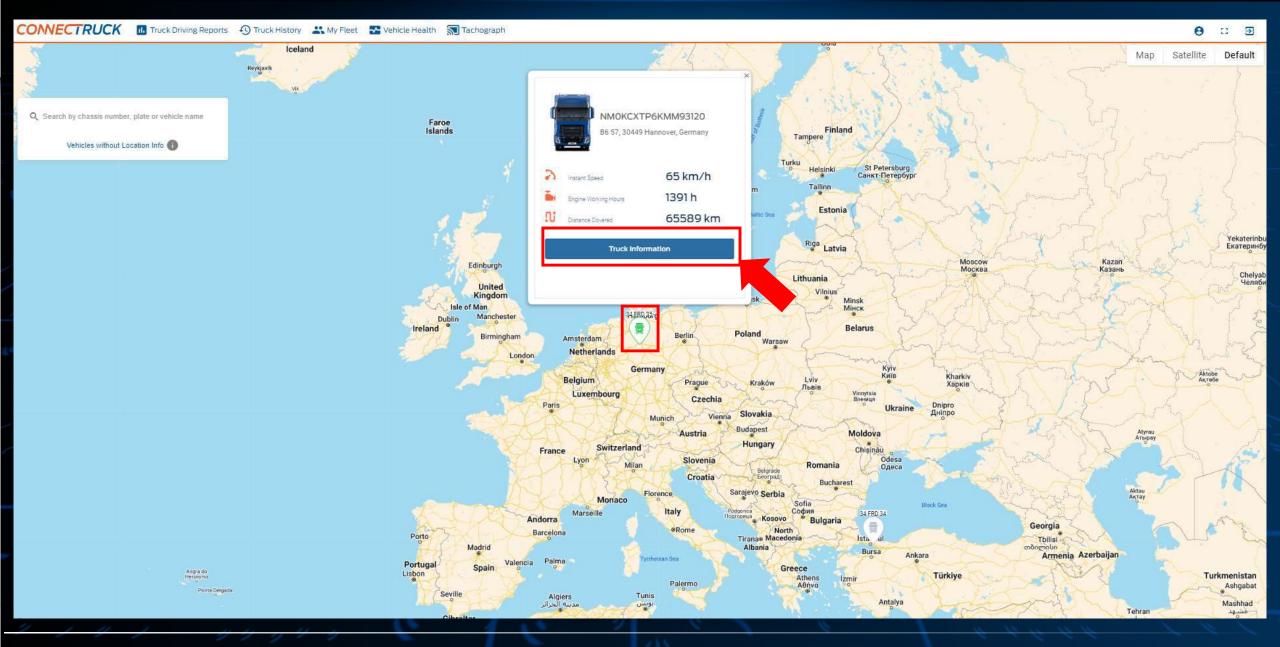


You can access basic information such as current speed, engine operating hours, and total driving distance by clicking on the vehicle icons. Click on the "Vehicle Information" button to see more detailed information.

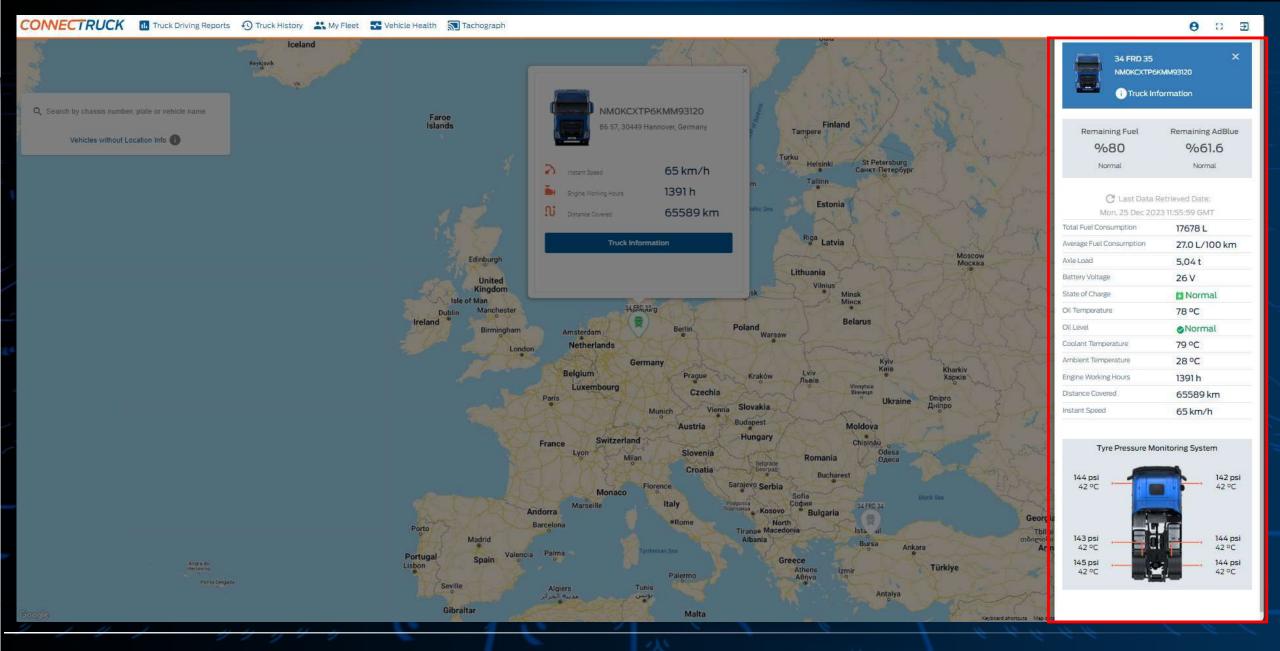


You can see information such as your vehicle's average fuel consumption and tire pressure in the card that opens on the right side of the screen.

#### CONNECTRUCK


Truck Driving Reports Screen

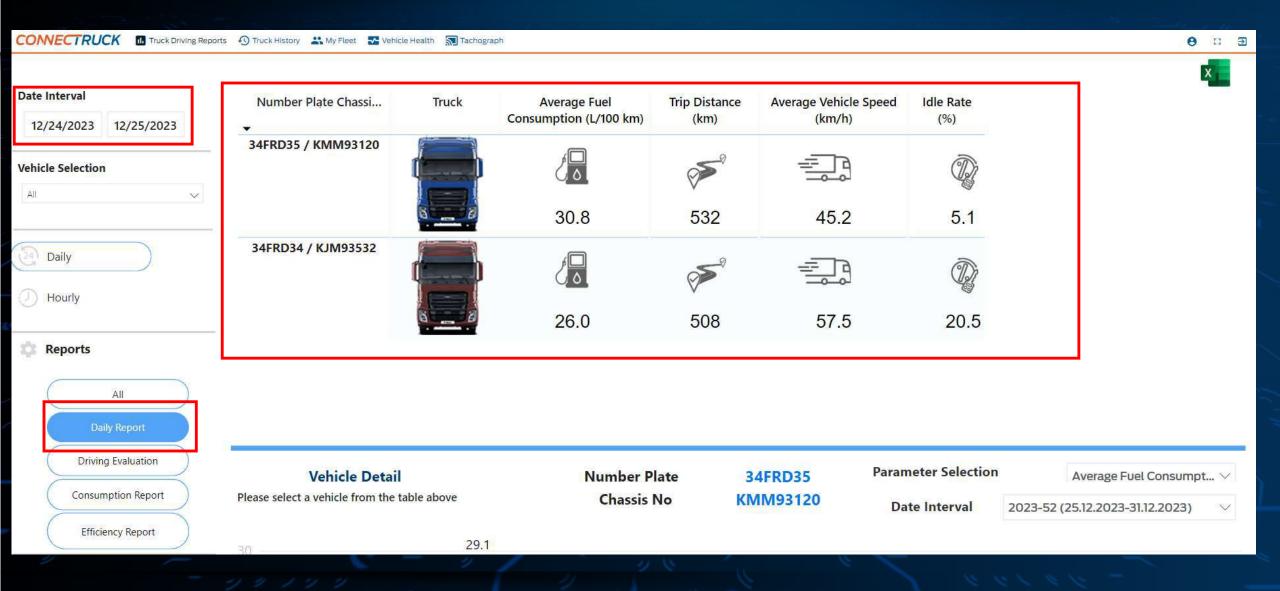


You can access more than 30 different data about your vehicles by clicking on the "Vehicle Driving Reports" menu. The screen opens with the "Daily Report" for the last 24 hours. If your vehicle has not generated data in the last 24 hours, it will not be listed in the table.

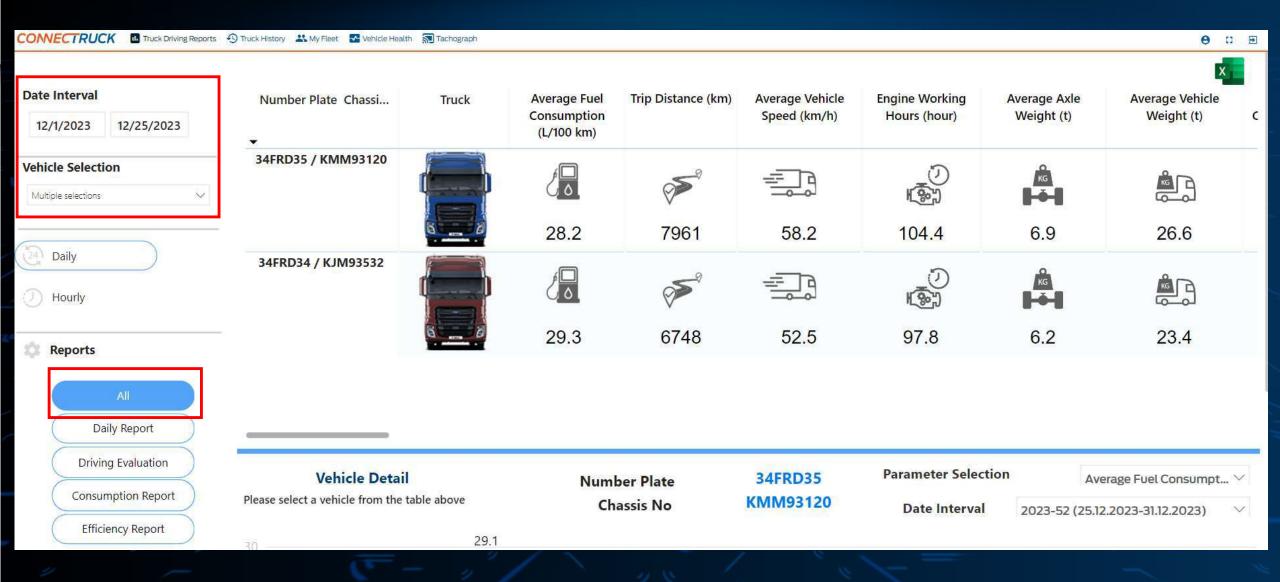


To access more detailed data, expand the date range on the left, then select the vehicles whose data you want to see and select "All" from the «Reports» menu.

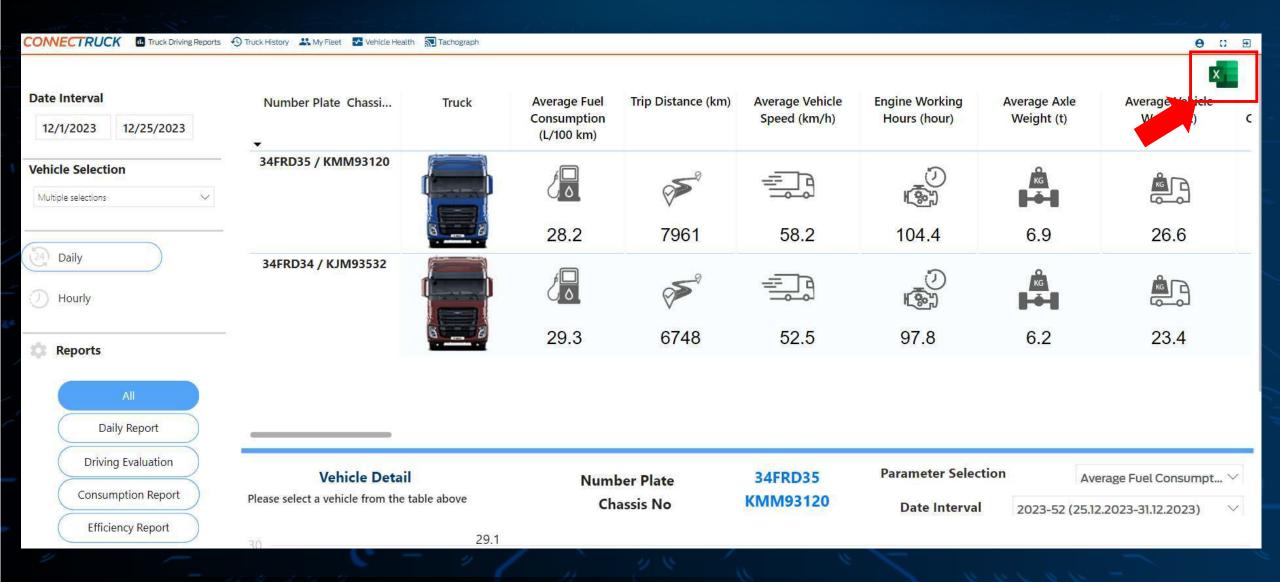

You can examine the average values of more than 30 parameters of <u>your selected vehicles</u> in <u>the date range you select</u> and download the daily breakdown by clicking the Excel button at the top right.

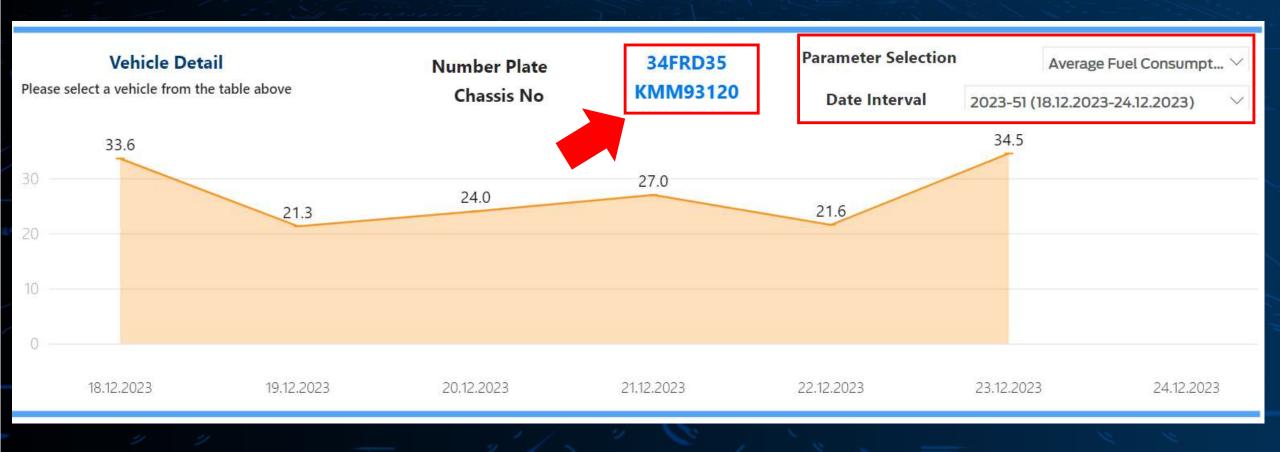


When you scroll down the screen, you can view the <u>weekly change</u> chart of the parameters of your chosen vehicle by clicking on it in the table above.

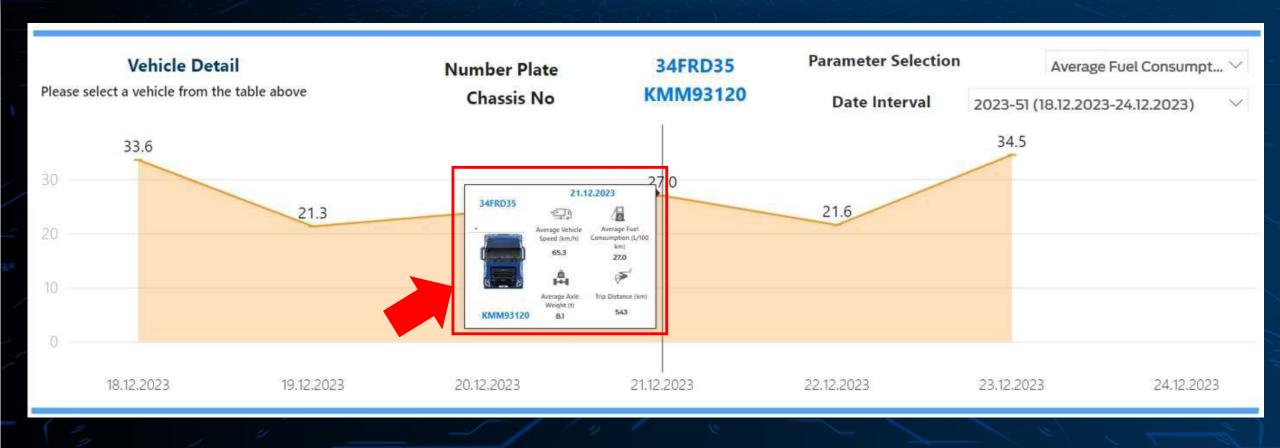

By hovering over the value on the date you want, you can see the average values of the relevant day in the window that opens.

Chassis No	Date	Average Fuel Consumption (L/100 km)	Trip Distance (km)	Average Vehicle Speed (km/h)	Engine Working Hours (hour)	Average Axle Weight (t)	Average Vehicle Weight (t)	Average Ur Consumption (L/
KMM93120	1.12.2023	25.1	456	61.7	6.4	8.1	23.7	1.3
	2.12.2023	-	-	0.0	0.9	3.8	+	3-
	3.12.2023			<del>(2</del> )	0.9	2.7	-:	: -
	4.12.2023	-	±4	0.0	1.6	3.6	æ	La
	5.12.2023	25.0	459	61.3	6.0	6.7	24.1	1.3


In the detail table at the bottom of the screen, you can see the daily driving data of the <u>vehicle you selected above for the date</u> <u>range you selected</u>. Lines appearing as «-» indicate that there is no work on that day or that the relevant feature is not available in the vehicle.

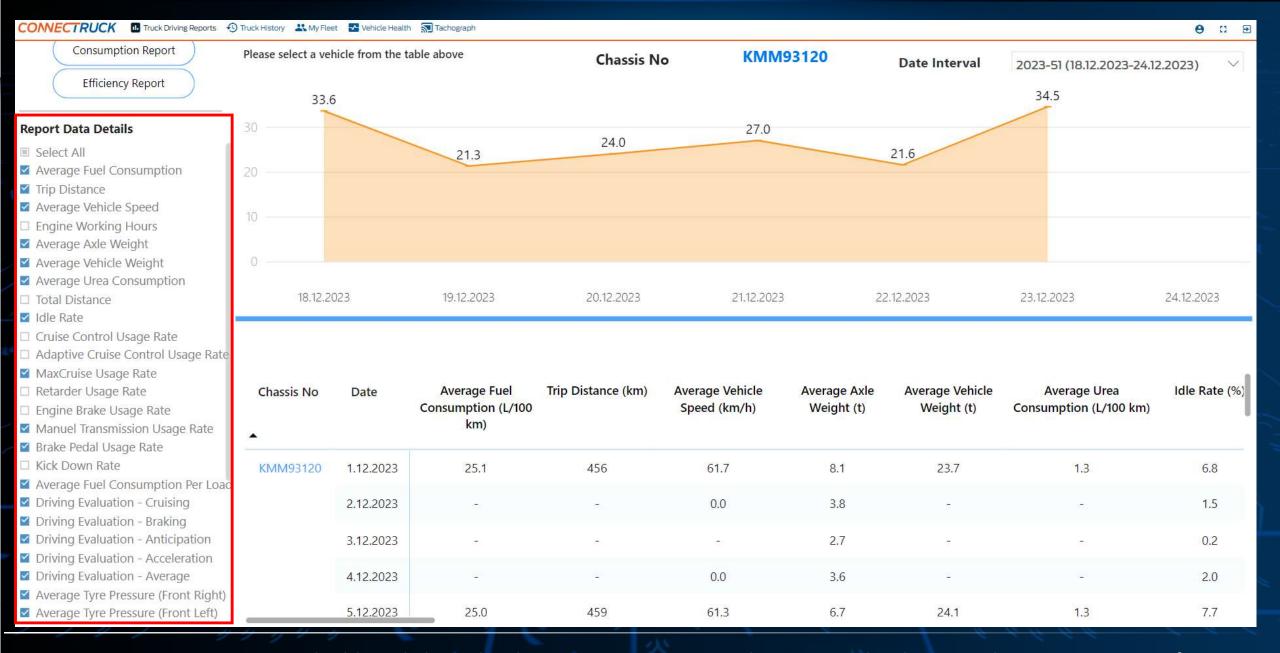


You can customize your report by blue-clicking the data you want to see and removing the data you do not want to see from the «Report Data Details» menu on the left of the screen.

#### CONNECTRUCK


Truck History Screen

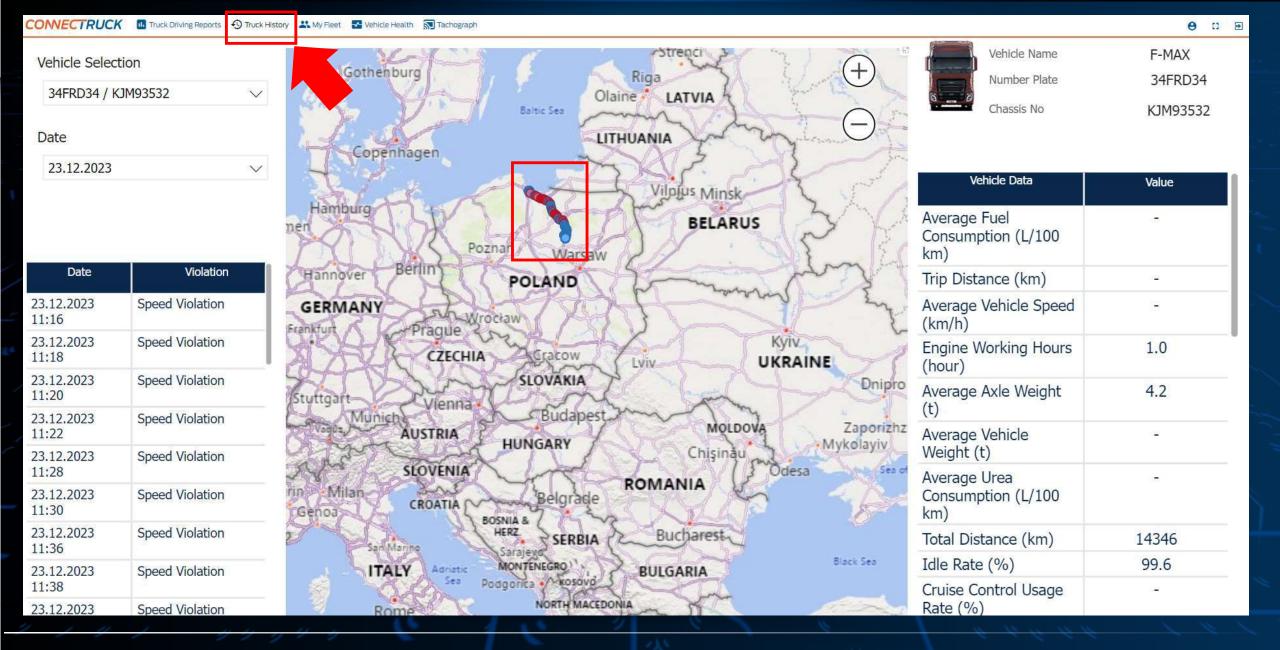


By clicking on the **Vehicle History** menu, you can see the historical routes of your connected vehicles for the last 30 days. You can examine the locations in more detail by zooming in and out on the map.

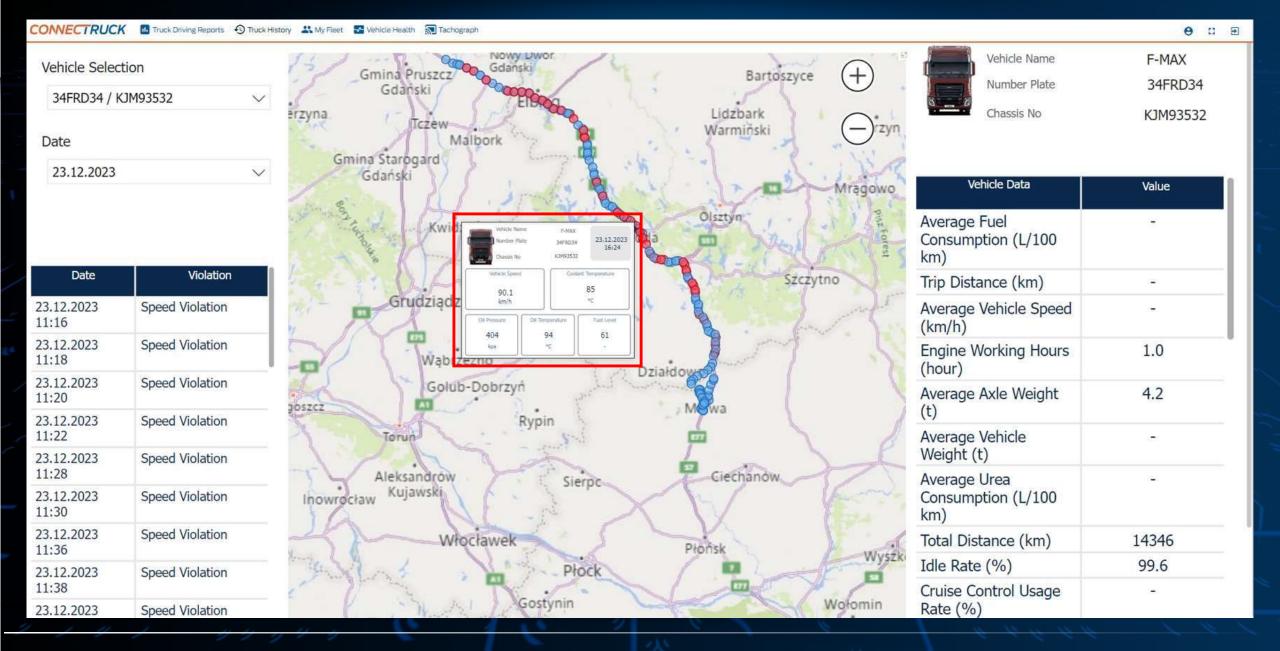

When you move your mouse over the location pins, you can access the details of your vehicle in the relevant location.

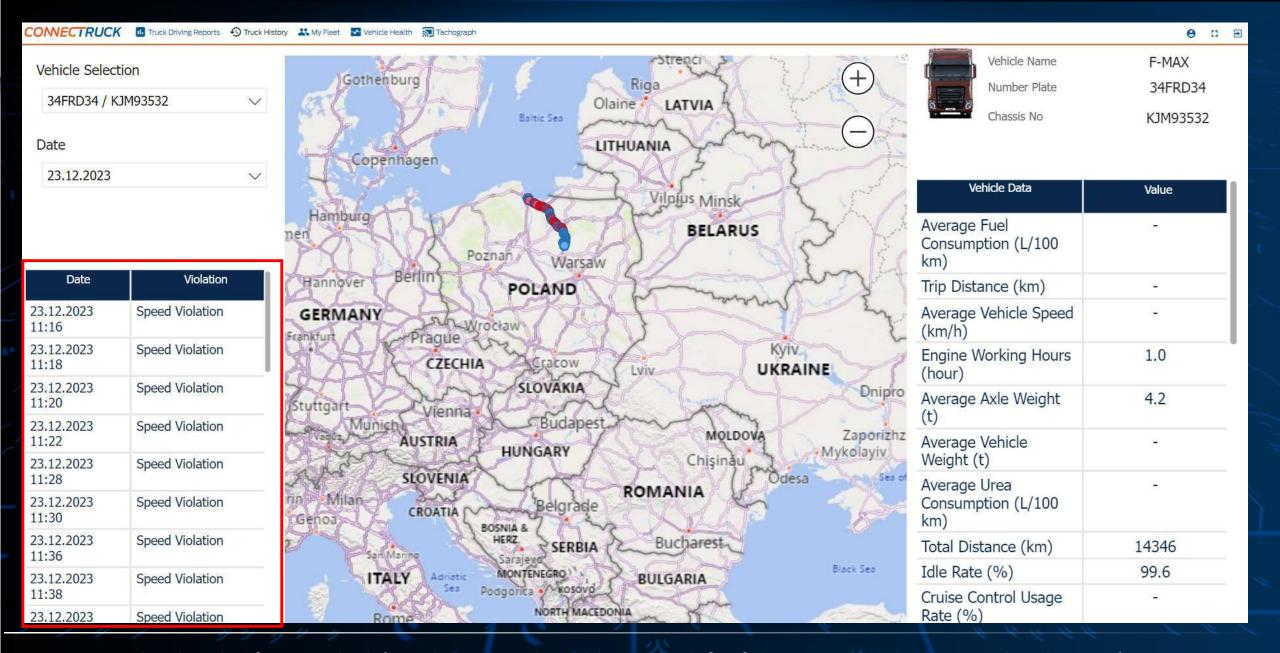


You can see the details of your vehicle's violations in the table on the left of the screen. It shows speed violations (over 90km/h), tire pressure warnings, and sudden drops in fuel levels.

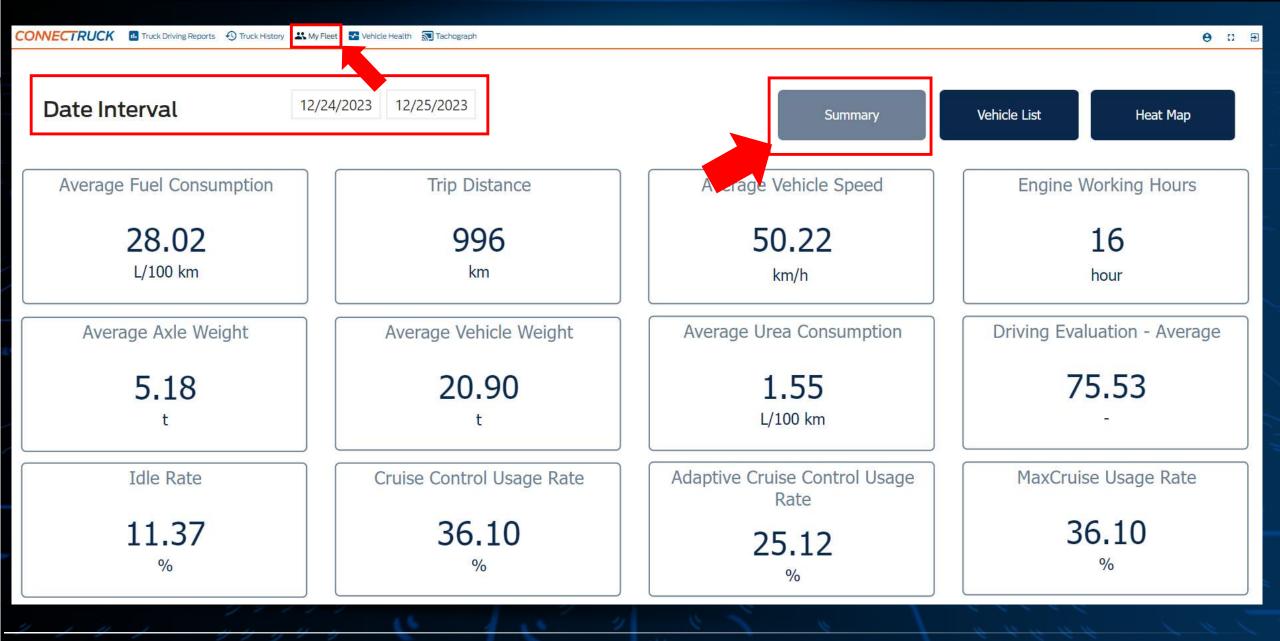

By clicking on the **Fleet** tab, you can see the average summary data of all vehicles in your fleet within the date range you selected.




You can click on the «Vehicle List» button to see the relevant data in a summary table.

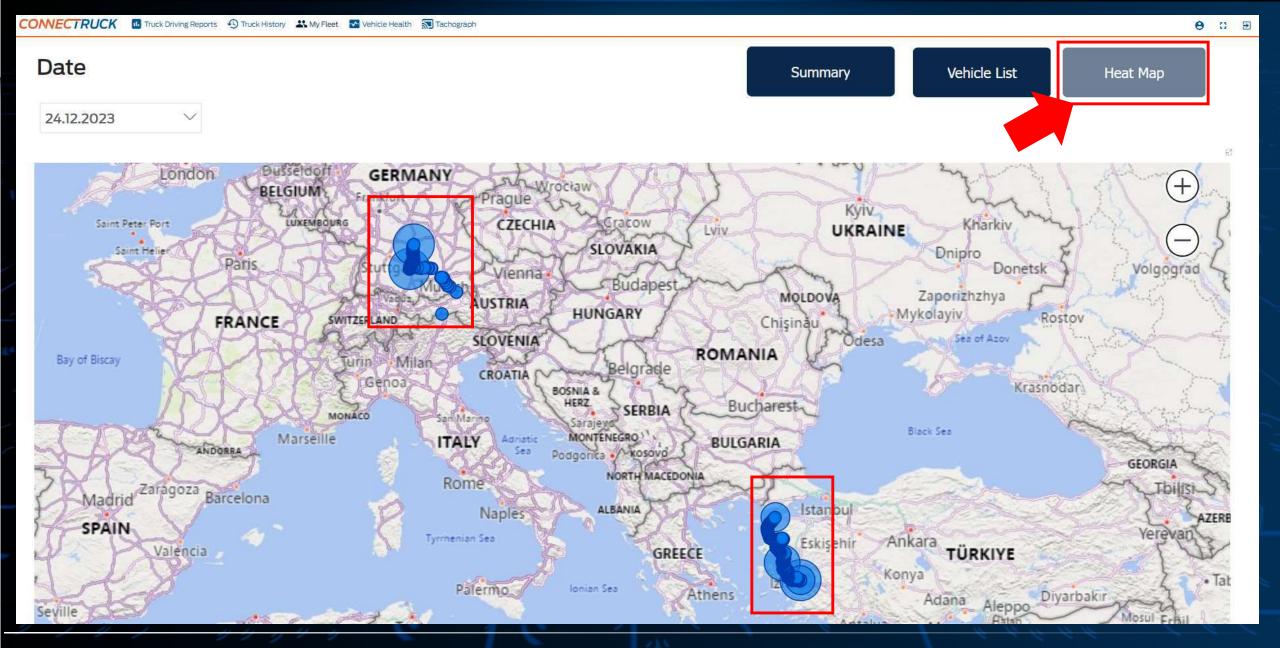


You can click the «Heat Map» button to see the routes your fleet travels in the selected date.

## CONNECTRUCK


Vehicle Health Screen

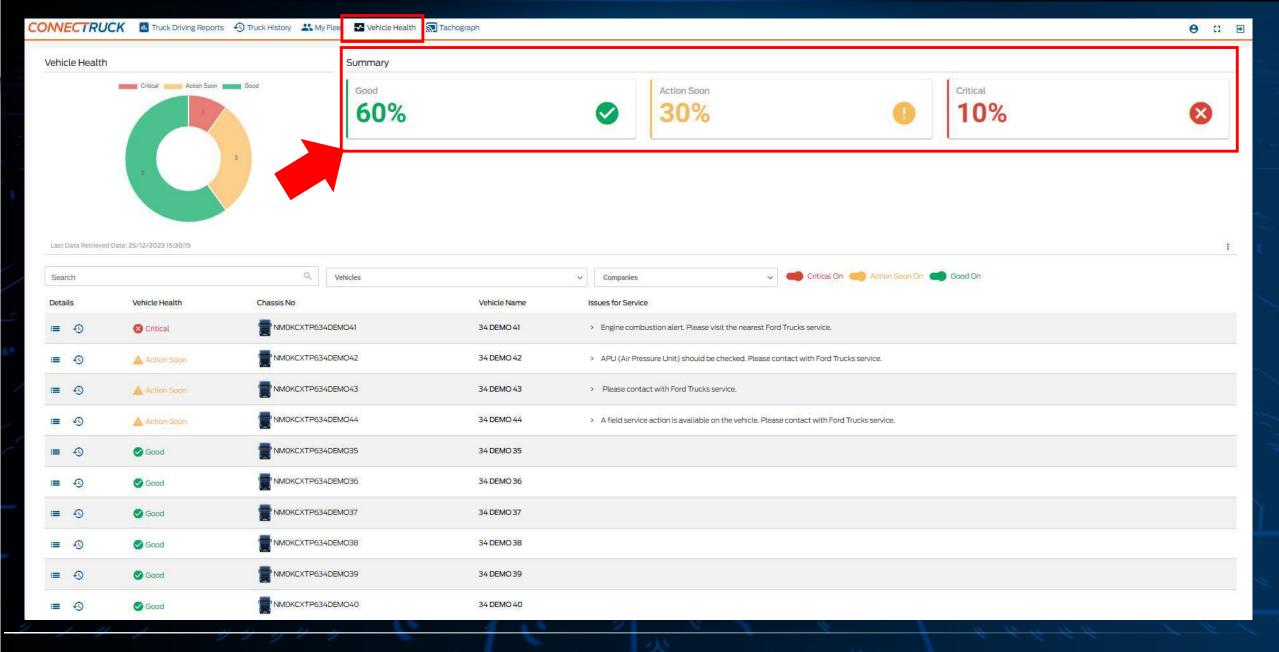


You can follow the health status of your fleet in detail in the «Vehicle Health» menu. You can review the percentage summary of your vehicle health in the «Summary» section.

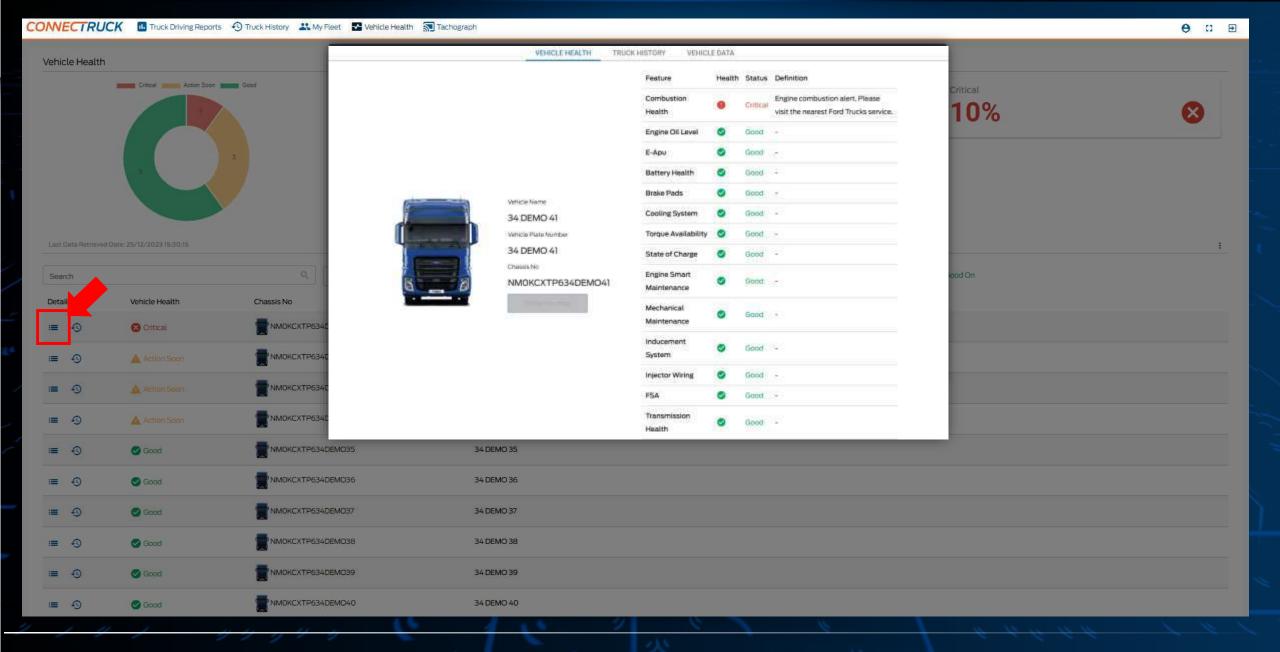


The vehicle health menu has been prepared to give advance warning before any malfunction occurs in your vehicle. Visit the page daily to increase your fleet's Uptime. Click the button on the left to access the details of your vehicle's health data.

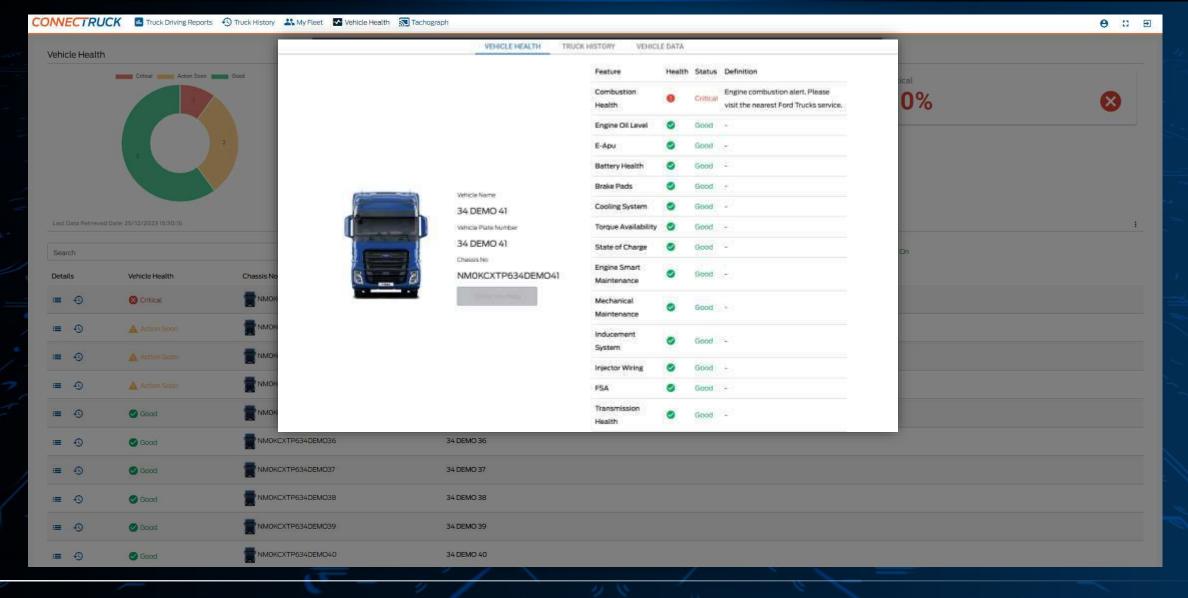


In the window that opens, you can follow the health of your vehicle in 14 different parameters. Red warnings are categorized as critical, and you need to visit the nearest Ford Trucks service immediately. Yellow warnings indicate situations that are given in advance and require you to contact your service. There is no problem with your green vehicles. You can click the **Show on Map**» button to see the current location of your vehicle.

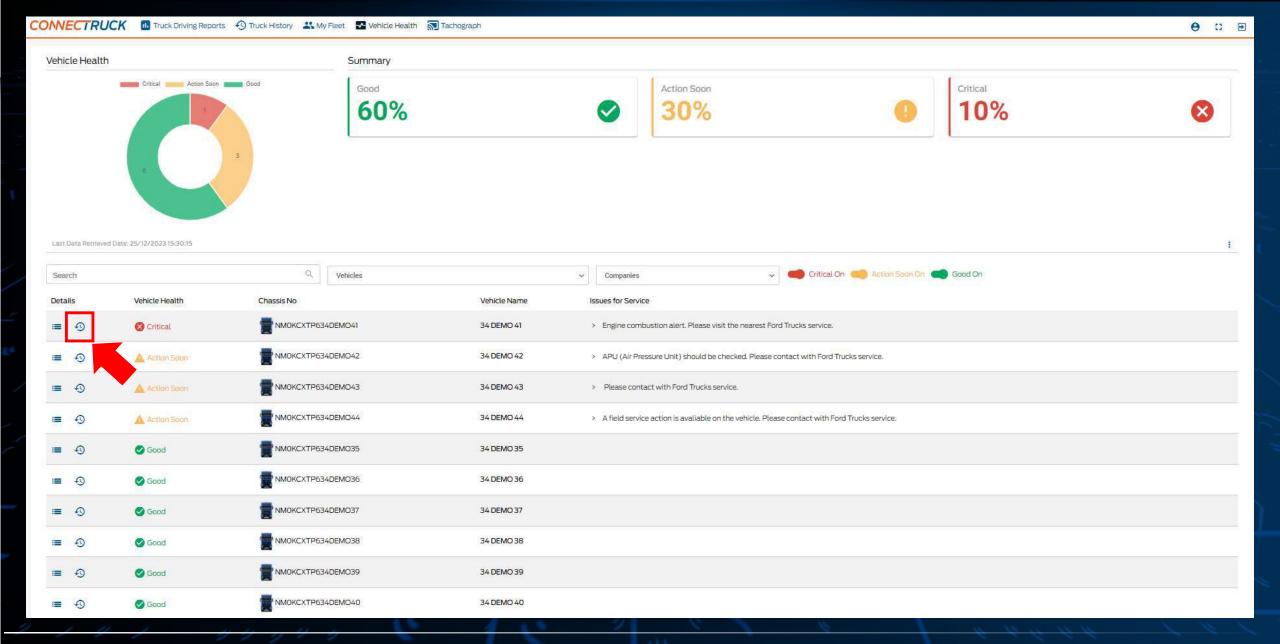

Click on the button shown to view your vehicle's past warnings.

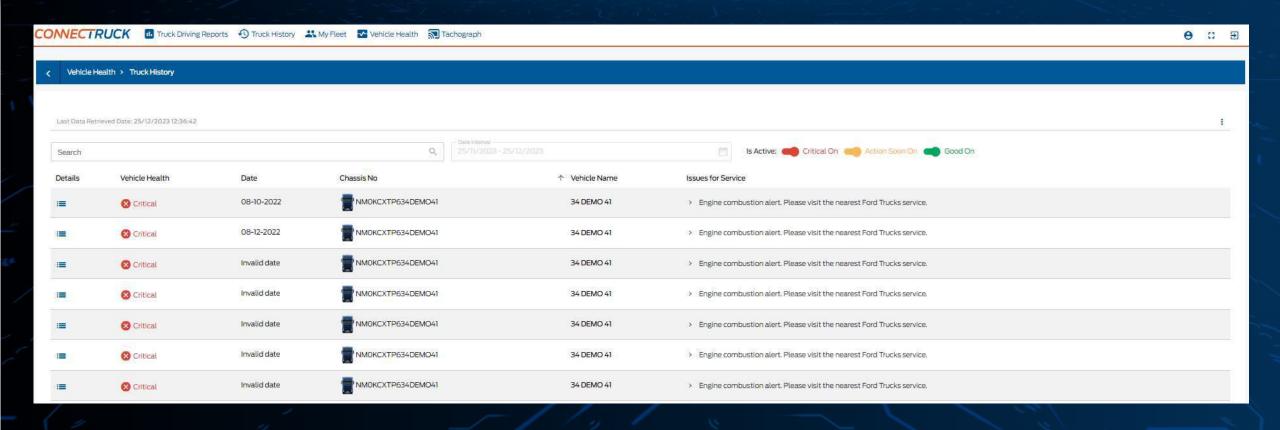


In the window that opens, you can check your vehicle's past warnings.

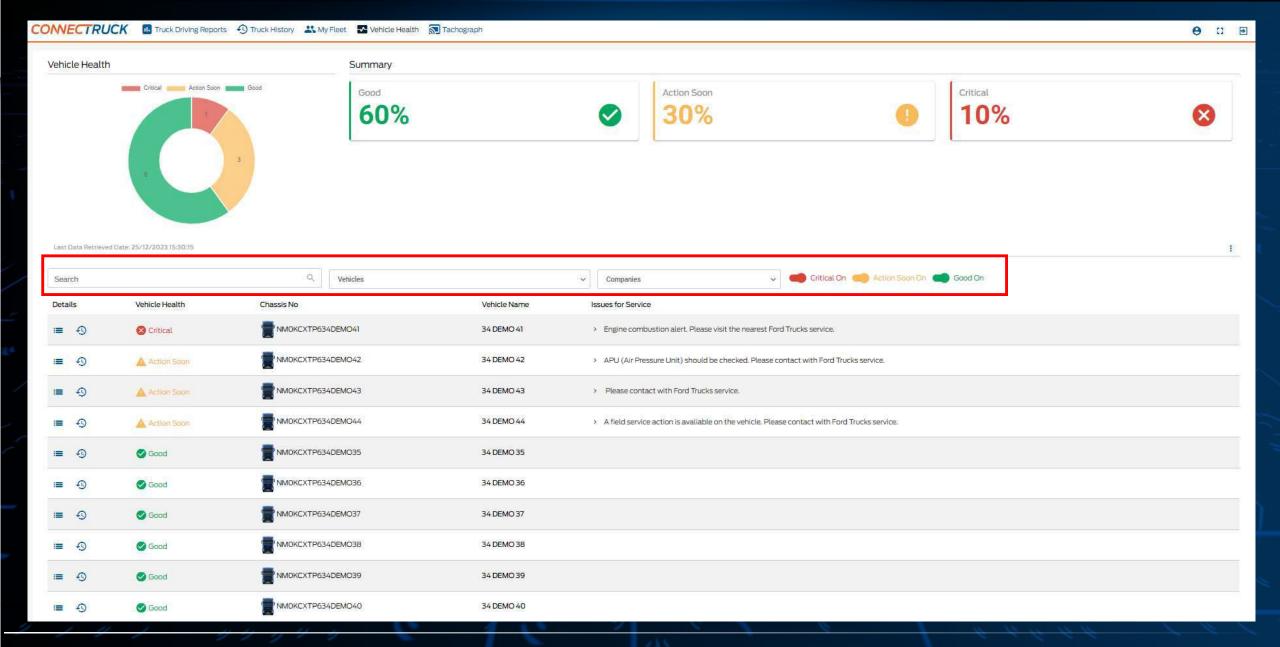

You can use filters to customize your screen.

## CONNECTRUCK


Tachograph Screen

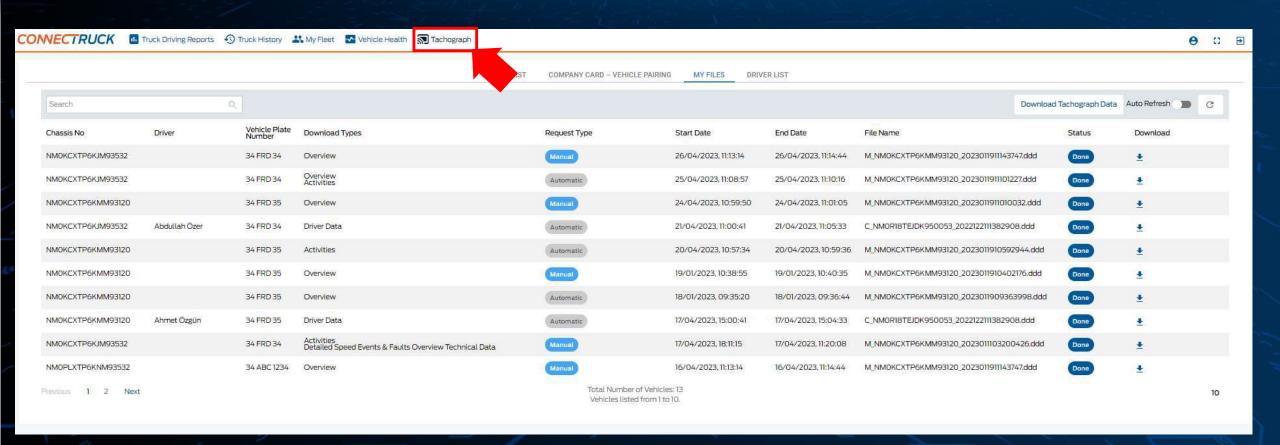


You can click on the «Tachograph» button to use the remote tachograph data download service. You can find the user manual of this service inside the page.

#### CONNECTRUCK


Profile Screen

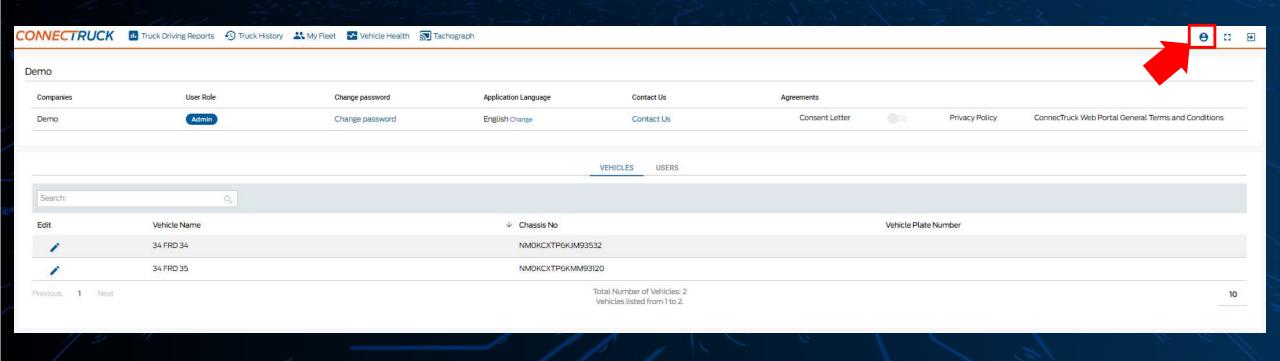


You can click on the «Profile» icon to view your ConnecTruck contracts, vehicles, authorized users, and change the language.

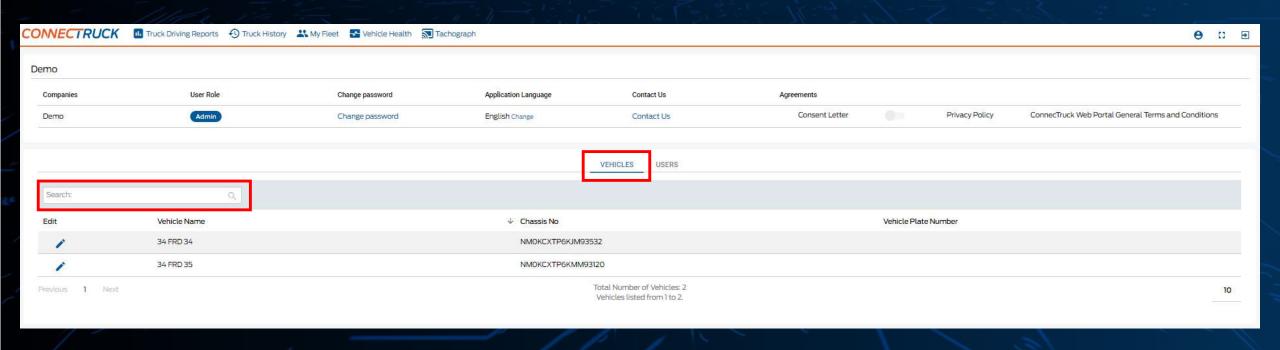

You can view the vehicles defined in your account from the «Vehicles» menu and quickly filter your vehicle from the «Search» box.

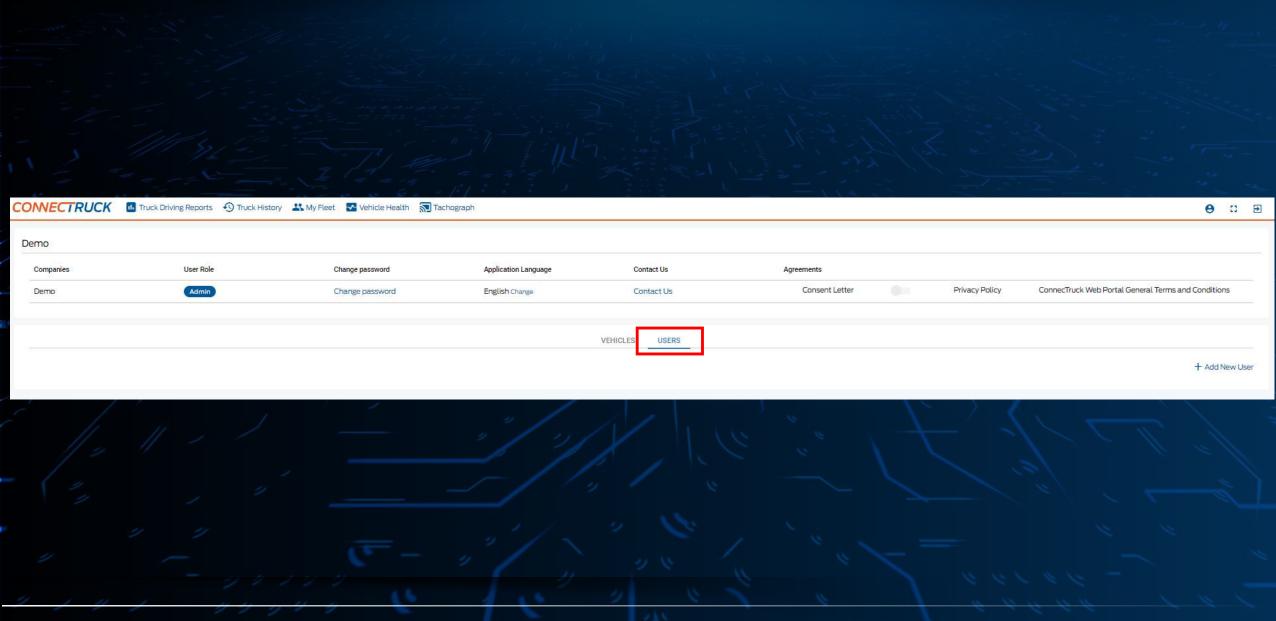

You can add users to view vehicle data and register to the system from the «Users» menu.

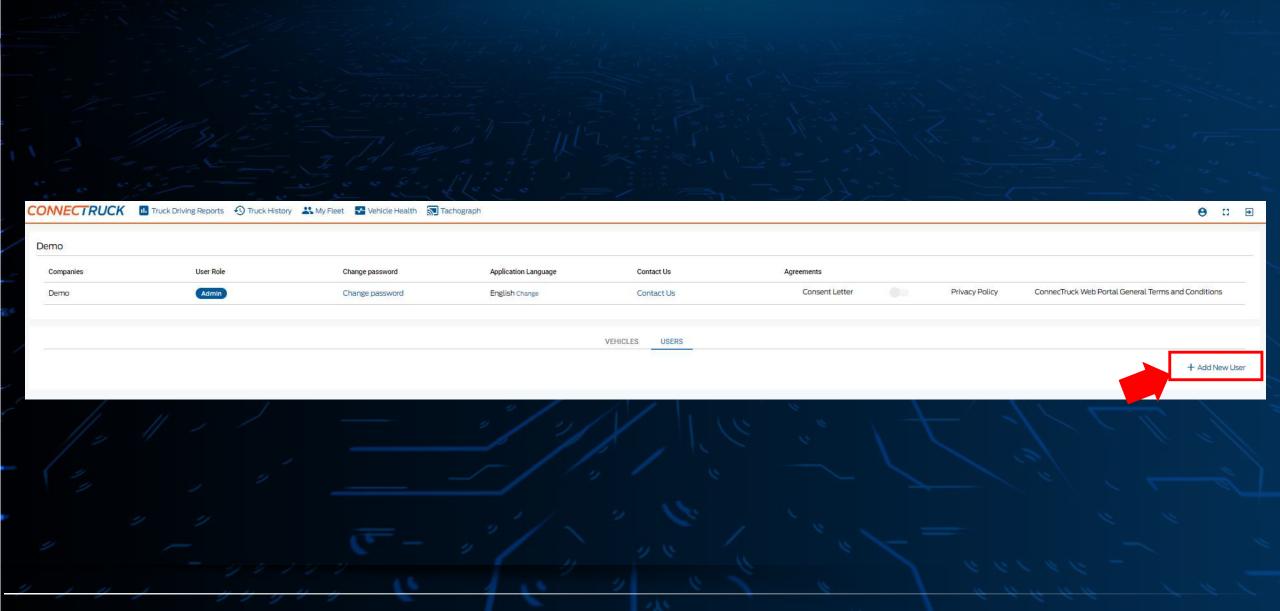

To add a user, click the «Add New User» button and follow the instructions.